

QUICKSTART GUIDE

Industrial Wi-Fi Access Point

Installation

Connect the Wi-Fi antenna to the Industrial Wi-Fi Access Point.

Connect power (+12VDC 500mA, positive center) to the Industrial Wi-Fi Access Point.

Connect the Ethernet cable to the Industrial Wi-Fi Access Point and to the modem.

Note: To disconnect the network cable from the Industrial Wi-Fi Access Point, see the instructions below.

Configuration

The Industrial Wi-Fi Access Point has been configured to work with the CTM-15X wireless data modem from the factory with the following wireless security settings:

SSID: CypressAP

Security: WPA-TKIP

WPA Preshared Key: CypressAccess

To change the Industrial Wi-Fi Access Point configuration, you will need to access the web management interface; the IP address and the login info are as follows:

IP address: 192.168.1.20

User Name: admin

Password: admin


Disconnecting the Ethernet Cable



To disconnect the Ethernet cable from the Industrial Wi-Fi Access Point, slide a flat object such as a paper clip or a small slot screwdriver underneath the locking tab.



Lift the flat object upwards while applying pressure with your forefinger.

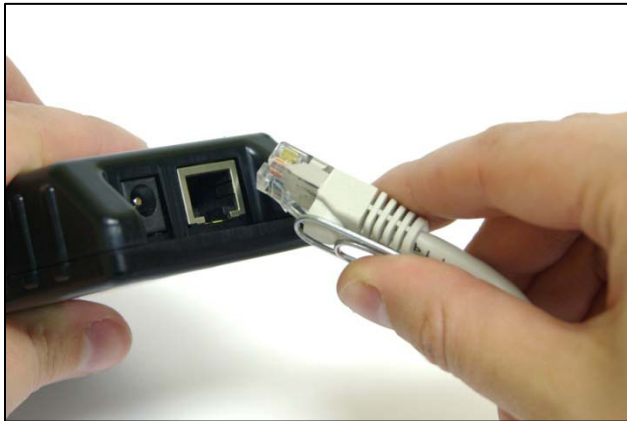

Gently pull to disconnect the Ethernet cable.

Contact

FOR TECHNICAL SUPPORT CONTACT:

Cypress Solutions Inc

www.cypress.bc.ca

support@cypress.bc.ca

1-877-985-2878 (9:00am to 5:00pm PST)