
## CTM-ONE WIRING OVERVIEW

>1.4.X Firmware


## Single Point of Connection (Connected to Vehicle ECU)

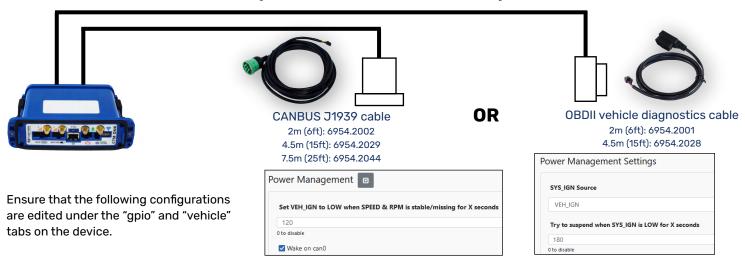

## Wired to Ignition (Connected to Vehicle ECU)



## Wired to Battery (No ECU Connection)

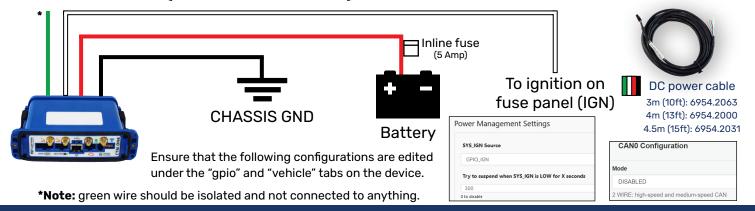

+1 (877) 985 2878

www.cypress.bc.ca // support@cypress.bc.ca







