



CTM-200 MANUAL

Model	CTM-200 R2
Revision	Revision 1.4

Revision Control

Description	Initials	Rev	Date
Initial Release	mm	1.0	16-Apr-2014
Updated Screenshots of new Web GUI	mm	1.1	24-Apr-2014
Updated more Screenshots of new Web GUI	sor	1.2	2-Feb-2016
Command Cleanup	js	1.2	11-Feb-2016
Updates	sor/js	1.3	9-Jan-2017
Document Reformatting	kl	1.4	7-Oct-2021

Table of Contents

1. Notice	5
1.1 Operation in hazardous environments.....	5
1.2 Regulatory restrictions.....	6
1.3 Electromagnetic Interference (EMI) – United States FCC Information.....	6
1.4 Electromagnetic Interference (EMI) – Canada Information.....	7
1.5 Trademarks	7
2. Physical Interfaces	8
2.1 Ethernet.....	8
2.2 General Purpose Input and Outputs	8
2.3 RS-232 serial port	8
2.4 USB OTG (On-The-Go) port	8
2.5 CAN Bus port	9
2.6 Locking 3 Wire power connector with ignition sense	9
2.7 Multiple RF connectors (SMA/RP-SMA)	9
3. SIM Card Installation.....	10
4. Connecting the CTM-200.....	11
4.1 Connect Power.....	11
4.2 Connect External Antennas	12
4.2.1 Cellular.....	12
4.2.2 GPS.....	13
4.2.3 Wi-Fi/Bluetooth	13
4.2.4 Satellite (Optional)	13
4.2.5 Short Range Wireless or WPAN (Optional).....	13
5. Installing the CTM-200	14
5.1 Mounting	14
5.2 Connecting the Ethernet Cables.....	15
5.3 Serial Data Cable Connection	15
5.4 General Purpose I/O (GPIO)	16
5.4.1 Output Connection	17
5.4.2 Input Connection	18
5.5 CAN2.0B Bus	20
6. Configuring the CTM-200	22
6.1 Login.....	22
6.2 Web Interface	23
6.3 Command Line Interface.....	26
6.4 Configuring, Cellular Wireless Network Parameters.....	27

6.5	Wi-Fi Networks	29
6.5.1	Access Point	30
6.5.2	Client.....	30
7.	Additional Features	32
7.1	Automatic Power Control	32
7.2	Power Consumption	33
7.3	Device Reset.....	33
7.4	LED Indicators	34
8.	General Troubleshooting Operation	35
9.	Time	36
9.1	Time Synchronization.....	36
9.2	Time zones	36
10.	Device Management	36
10.1	Upgrading and Configuring	36
10.2	How to access the CTM-200 remotely.....	37
10.3	SMS	37
10.4	SNMP	39
10.5	CCM Manager.....	39
11.	Reporting.....	40
11.1	Regular Interval Reports (AVL).....	40
11.2	Irregular Interval Reports	42
11.3	Infrequent Interval Reports	43
11.4	Triggers or event conditions.....	43
11.5	Report Definition.....	44
11.6	Report Messages.....	45
11.7	Report Triggered Scripts	47
11.8	File Based Reporting	48
11.9	Store and Forward	48
12.	System and Event logs.....	49
13.	Connection monitoring tools	50
14.	Security	50
14.1	Remote Access Control	50
14.2	Friends list	50
14.3	LAN Friends.....	50
14.4	Radius.....	50
15.	Networking.....	51
15.1	VPN	51
15.1.1	IPSec.....	51

15.1.2	VPNC.....	51
16.	Engine Diagnostics Support.....	52
17.	Geo-Routing	53
18.	Accessory or 3 rd party product support.....	53
18.1	PAD Mode	53
18.2	MODBUS.....	53
18.3	Man Down Pendant	53
18.4	Garmin® Personal Navigation Devices	54
18.5	Miscellaneous external devices, salt spreader controllers, etc.....	54
18.6	Access Control	55
18.7	RF Switch.....	56
18.8	CTM-200 with integrated Iridium™ ISU module.....	56
18.9	CTM-200 with integrated battery backup.....	57

1. Notice

Due to the nature of wireless communication, the reception or transmission of data can never be guaranteed. Data may be delayed, corrupted, or never received. Data transfer problems are rare with well-constructed and configured wireless networks used in conjunction with devices such as the CTM-200 wireless data device. Cypress Solutions Inc. accepts no responsibility for damages of any kind including, but not limited to personal injury, death, or loss of property due to the delay or loss of data resulting from the use of the CTM-200 wireless data device.

1.1 Operation in hazardous environments

THIS EQUIPMENT IS SUITABLE FOR USE IN CLASS I DIVISION 2 GROUPS A, B,C AND D OR NON-HAZARDOUS LOCATIONS ONLY.

CTM-200 R2 Cellular Gateway
CLASS I DIV 2 GROUPS A,B,C,D
TEMPERATURE CODE: T5 ($-35^{\circ}\text{C} \leq T_a \leq +65^{\circ}\text{C}$)
6-36 Volts DC, 1A
Conforms to UL STD. 60950-1 & ISA STD. 12.12.01
Certified to CSA STDS. C22.2 #213 and C22.2 #60950-1

WARNING - EXPLOSION HAZARD

Do not disconnect while circuit is live unless area is known to be non-hazardous. The CTM-200 must be installed within a tool secure enclosure. See Manual Sect. 4.1 for installation Instructions.

AVERTISSEMENT - RISQUE D'EXPLOSION

Ne pas débrancher tant que le circuit est sous tension, à moins qu'il ne s'agisse d'un emplacement non dangereux. Le CTM-200 doit être installé dans une enceinte sécurisée de l'outil. Voir section 4.1 dans la guide d'installation pour les instructions d'installation.



CYPRSS
SOLUTIONS



Wireless transmitters can cause interference with some critical operation equipment. For this reason, it is required that the RF portion of the CTM-200 wireless data device be turned off when in the vicinity of blasting operations, medical equipment, life support equipment, or any other equipment that is susceptible to radio interference. The CTM-200 wireless data device must be turned off when on-board or in the vicinity of any aircraft. The FAA prohibits the use of wireless transmitter equipment at any time during aircraft flight.

1.2 Regulatory restrictions

CAUTION: Any modifications to the CTM-200 wireless data device not expressly authorized by Cypress Solutions Inc. may cause its regulatory approval status to become invalidated, thereby voiding your authority to use the product.

The CTM-200 wireless data device contains a wireless device approved under FCC CFR 47 part 2.1091 and Industry Canada RSS-102 rules for operation as a mobile or fixed device with its specified antenna of gain $\leq 6\text{dBi}$ and from which a separation distance of at least 20 cm (8") must be maintained from all persons at all times and during all modes of operation. The antenna used must not be co-located or operated in conjunction with any other antenna or transmitter. These rules are in place to prevent any possible hazard due to personal exposure to electromagnetic radiation.

CTM-200 devices are designed to operate with approved wireless modules installed. These cards will have their own FCC and Industry Canada approval ID numbers.

1.3 Electromagnetic Interference (EMI) – United States FCC Information

This equipment has been tested and found to comply with limits for a class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that harmful interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

1.4 Electromagnetic Interference (EMI) – Canada Information

This digital apparatus does not exceed the class B limits for radio noise emissions from digital apparatus as set out in the interference causing equipment standard entitled “Digital Apparatus”, ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques”, NMB-003 édictée par le Ministre des Communications.

1.5 Trademarks

All brand or product names, trademarks, logos, etc. used in this manual are owned by their respective companies.

2. Physical Interfaces

2.1 Ethernet

- Two Ethernet ports (bridged/non-bridged)
- Ethernet services can be disabled
- Ethernet ports can use DHCP or static IP addresses, DHCP can be configured to a single IP address
- Gateway support when an Ethernet port is used to connect to the Internet through another router
- Static NAT support
- Multi-wan support for special packet routing configurations

2.2 General Purpose Input and Outputs

- One General Purpose 18 position Input and Output interface
- Inputs x 6 (2 differential)
- Outputs x 4
- Wiegand/iButton™ interface

2.3 RS-232 serial port

- Console, Command Line Interface access
- PPP, dial up over serial (legacy)
- PAD host interface (2 available), Virtual Serial Line replacement
- MODBUS host interface, MODBUS interface
- Serial Access Control (RFID) interface, Access control hardware interface
- Various Spreader Controller models, Spreader controller interface
- External GPS receiver, Add a high precision GPS receiver input
- Garmin™ Personal Navigation Devices, Interface for in vehicle display
- Auxiliary Equipment Interface
- Inputs x 2
- Outputs x 2

2.4 USB OTG (On-The-Go) port

- For future implementation

2.5 CAN Bus port


- OBDII (ISO15765 -4)
- J1939

2.6 Locking 3 Wire power connector with ignition sense

- 6-36 VDC with Transient (spike) protection
- 2 mA @ 12 Volts low power mode

2.7 Multiple RF connectors (SMA/RP-SMA)

- Threaded SMA style for all RF connections

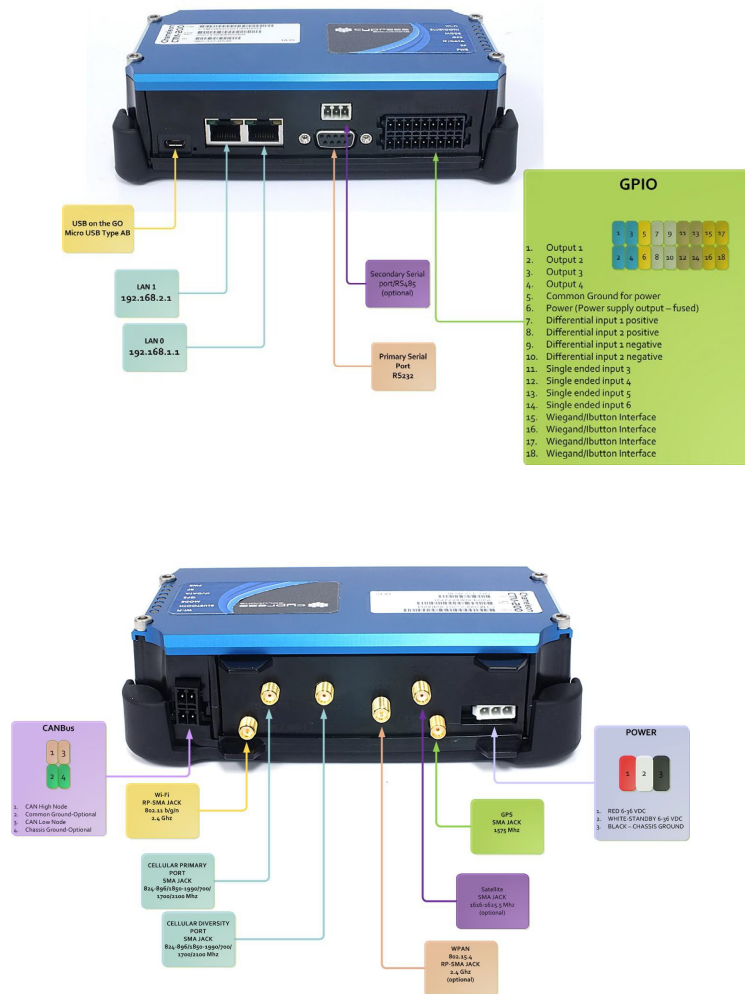

3. SIM Card Installation

In most cases the device will ship with a pre-configured, installed SIM card. In this case, SIM card installation is not required.

SIM card access is via the removal of the top cover plate by removing the 4 top cover #8 socket head cap screws using a 9/64" Allen key driver.




4. Connecting the CTM-200

4.1 Connect Power

The CTM-200 can be paired with a DC power cable for direct connection to a DC power supply or with an optional AC Wall Plug adaptor that allows quick and easy connection to standard 120V AC Power.

Red	+5.5V to +36V DC
Black	0V return (GND)
White	Standby / Ignition (+V for operation, Off for standby)

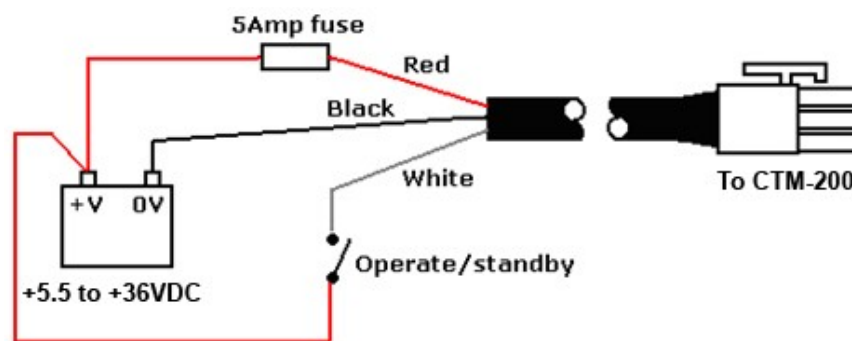

A 5 Amp “slow-blow” fuse is recommended in the +V supply line.

When the operate/standby line is used, the CTM-200 can take advantage of the state of this line using its “ignition sense” features. When the ignition line is wired the CTM-200 does not completely shutdown, a very small amount of power is used (2 mA) which allows a small microprocessor to monitor the status of various inputs so the device can “wake on events” that occur when the device is in low power mode.

Advantages of connecting power using the vehicle operate/standby or ignition line:

- Ignition ON/OFF events can be reported and logged.
- Shutdown based on a timer can be activated, for example, turn CTM-200 off 10 mins after ignition has been switched off.
- GPS re-acquisition time is minimized

Events that can trigger the device to enter full operating mode:

- Wake on an acceleration condition
- Wake on an onboard geo-fence violation.
- Wake on real time clock conditions.
- Wake up when a GPS monitored speed is met.
- Wake up based on a temperature (as monitored by the internal temperature sensor)
- Wake the CTM-200 an input being triggered via the GPIO interface.
- Wake on Man-Down Pendant alert

Before any external cables are connected (GPS, Cellular RF, Wi-Fi RF, WPAN RF, serial, Ethernet, GPIO, CAN), verify that the power cable is wired correctly on the battery side. In certain cases, reversely connected battery input may cause damage which is not covered under warranty.

4.2 Connect External Antennas

The CTM-200 is designed to operate with external antennas. Antennas vary a great deal and should be selected based on the application the device is going to be used. All antenna connectors utilize SMA jacks with the exception of Wi-Fi/ Bluetooth which require reverse polarity SMA (RP-SMA).

For optimum performance antennas should be mounted in a vertical orientation as high up as possible and with clear line of sight in all directions. For regulatory purposes it must be mounted in such a position as to maintain a separation distance from any person of at least 20cm (8”).

4.2.1 Cellular

The cellular connection supports MIMO (multi-in multi-out). For best performance ensure both primary and secondary cellular antenna connections are made to an antenna that supports diversity or to two separate antennas. If only one antenna connection is available, use the connection labeled “PRI-RF”.

Technology	Frequency Range (MHz)
LTE	700(B17), (B13) / 850, (B5) / 1700/2100(B4) AWS, 1900, (B2) PCS / 2500(B41) Note: LTE frequencies are RF module dependent and can change based on carrier/region
WCDMA	850/1900/2100
CDMA	1xRTT/EV-DO 800/1900
GSM/GPRS/EDGE	850/900/1800/1900

4.2.2 GPS

The GPS antenna should be an active type of antenna with a gain of at least 26dB and compatible with a 3.3 volt DC supply provided directly by the CTM-200 via the coax cable. The antenna installation should typically be on an upper horizontal surface of a vehicle or building with a clear 360-degree view of the sky.

Connect a suitable GPS antenna to the port labeled "GPS". For best performance select a GPS antenna that supports GPS/Glonass/Galileo(GNSS) constellations.

Technology	Frequency Range (MHz)
GPS/GLONASS/Galileo	L1 Band 1559-1610

4.2.3 Wi-Fi/Bluetooth

Local Wireless via Wi-Fi (802.11bgn) and Bluetooth (802.15.1) requires an external Wi-Fi antenna connected via a reverse polarity SMA connector

Technology	Frequency Range (MHz)
Wi-Fi	2400
Bluetooth	2400

4.2.4 Satellite (Optional)

The Chameleon CTM-200 "Dual Mode" Gateway features an Iridium Subscriber Unit (ISU) satellite module (SBD9602) and a mini-PCI express/NGFF form factor cellular wireless module. With the internal ISU, reports, cmd commands and Packet Assembly/Disassembly (PAD) can all be sent via satellite. The CTM-200 offers remote configuration dual mode features, where It can be set to smart switching, using cellular when available, and where cellular coverage is marginal, it switches to satellite (resulting in 100% coverage).

For more details regarding satellite configuration, visit the Cypress *CTM-200 Application Notes* page online, at <https://www.cypress.bc.ca/resources/> and click on the 'Application Notes' link in the CTM-200 section.

4.2.5 Short Range Wireless or WPAN (Optional)

Short-range wireless for "Man-Down Pendant" accessories using the 802.15.4 standard



Technology	Frequency Range (MHz)
WPAN	2400

5. Installing the CTM-200

5.1 Mounting

The CTM-200 includes a flexible mounting bracket that has eight 5mm mounting holes suitable for #10 screws, use 4 of the 8 available mounting holes. Take care not to over-tighten these screws and damage the bracket. Once this has been installed in the required location, clip the CTM-200 into the 4 tabs of the bracket. The bracket can be used as drill guide template. There are a total of 8 mounting holes (2, 4-hole patterns, 2" x 5.5" and 1.75" x 3.75").

The CTM-200 should be mounted in an area where it is free from dust and liquids.

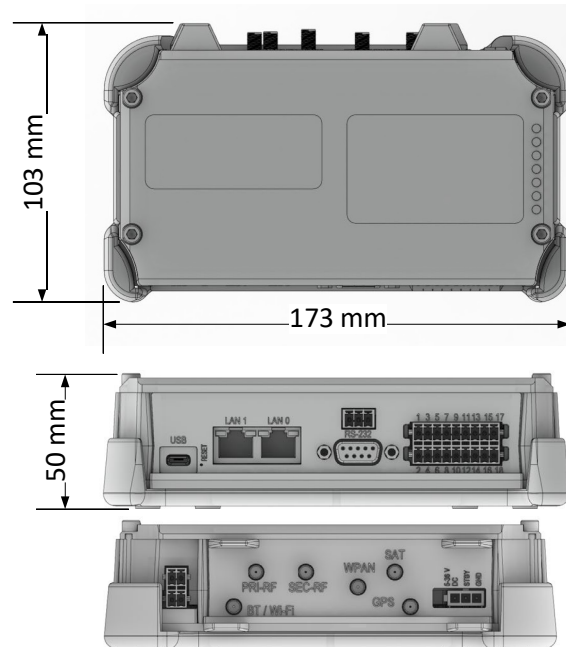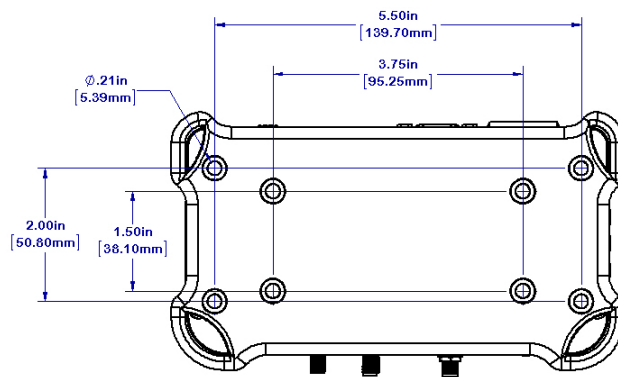

5.2 Connecting the Ethernet Cables

Plug one end of a standard Ethernet patch cable into the CTM-200's Ethernet port(s), and the other end into the LAN device, PC or Ethernet peripheral. The Ethernet port is compatible with 10Base-T or 100Base-T connection types. The Ethernet ports on the CTM-200 are non-switched, each having their own unique IP address. The Ethernet ports support auto MDI/MDIX, meaning no Ethernet crossover cable will be needed regardless of whether the CTM-200 is connected to a router or to a computer.

Ethernet Port	Default IP
LAN0	192.168.1.1
LAN1	192.168.2.1

5.3 Serial Data Cable Connection


The serial data port is a standard DB9 female connector configured as Data Communication Equipment (DCE) and is wired as per the table below.

DB9 Pin	Signal	Name	Direction
1	DOUT5	Digital Output 5	
2	RxD	Received Data (by DTE)	CTM-200 to PC
3	TxD	Transmitted Data (by DTE)	PC to CTM-200
4	INPUT7	Input 7	
5	GND	Signal Ground	
6	DOUT6	Digital Output 6	
7	RTS	Request To Send	PC to CTM-200
8	CTS	Clear To Send	CTM-200 to PC
9	INPUT8	Input 8	

Serial data ports on most computer equipment are configured as Data Terminal Equipment (DTE) with a DB9 male connector. A standard serial data cable will allow for direct connection of the CTM-200 to most computer and terminal equipment. In some cases, it may be necessary to insert a "null modem" or "gender changer" in the serial data line in order to correctly connect between the devices.

As an option on the CTM-200 a second serial port is available as a 3 pin DCE connection:

PIN1: RxD
 PIN2: TxD
 PIN3: GND



5.4 General Purpose I/O (GPIO)

The GPIO connector is a 2 x 9 position 3.5 mm pitch connector. Single or double row connectors can be used.

In addition to the 4 outputs and 6 inputs on the GPIO connector an extra 2 outputs and 2 single ended inputs are available on the RS-232 port.


Digital inputs have pull-down resistors. All general purpose I/O (GPIO) pins (i.e. all input and outputs) have transient protection.

Phoenix Combicon connector #:

Part Number	Description	Locking Tab
1952092	Single Row	YES
1952335	Single Row	NO
1738872	Dual Row	NO

The I/O port provides for the control of 4 external devices and for monitoring 6 external sensors and interfacing to RFID systems.


1	3	5	7	9	11	13	15	17
2	4	6	8	10	12	14	16	18

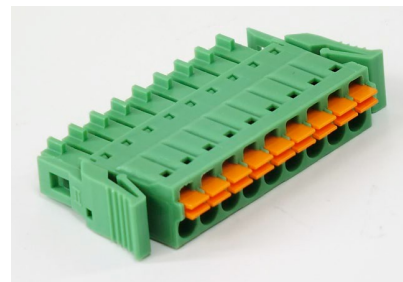


GPIO Block Pin	Signal	Name
1	DOUT1	Output 1
2	DOUT2	Output 2
3	DOUT3	Output 3
4	DOUT4	Output 4
5	GND	Common Ground for power
6	VCC	Power (Power supply output – fused)
7	INPUT1+	Differential input 1 positive
8	INPUT2+	Differential input 2 positive
9	INPUT1-	Differential input 1 negative
10	INPUT2-	Differential input 2 negative
11	INPUT3	Single ended input 3
12	INPUT4	Single ended input 4
13	INPUT5	Single ended input 5
14	INPUT6	Single ended input 6
15 – 18	RFID	Wiegand/iButton™ Interface

Additional GPIO pins available on the DB9 serial port connector:

DB9 Pin	Signal	Name
1	DOUT5	Output 5
4	INPUT7	Single ended input 7
6	DOUT6	Output 6
9	INPUT8	Single ended input 8

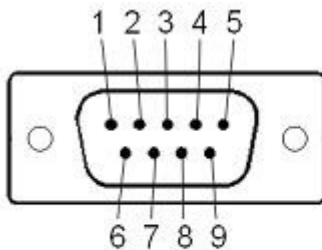

Male DB-9

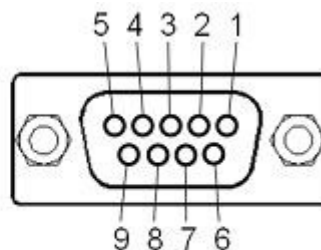


Female DB-9

5.4.1 Output Connection

The 4 outputs are configured as “open drain” which means that they can be directly connected to energize external relays, lamps or other DC devices.

Maximum supply voltage is 36 volts, with a maximum load current of 500mA.

Recommended wire gauge for use with the connector is 16AWG. Note that the OUT GND connection is connected to the CTM-200's supply ground.

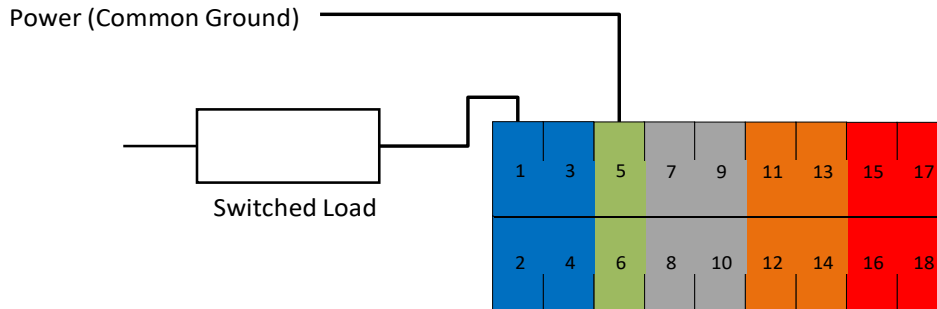


5.4.2 Input Connection

The 8 inputs may be configured in the CTM-200 for monitoring a digital DC voltage state or an analog DC voltage. Six of the inputs are single ended and two are differential.


For digital state monitoring the minimum input voltage is 0 volts while the maximum is 36 volts.

The threshold detection voltage is 2.5 volts with 1 volt of hysteresis. Note that the IN GND connection is referenced to the CTM-200's supply ground.

Analog input values will be sampled and can be reported at a maximum frequency of 10Hz.

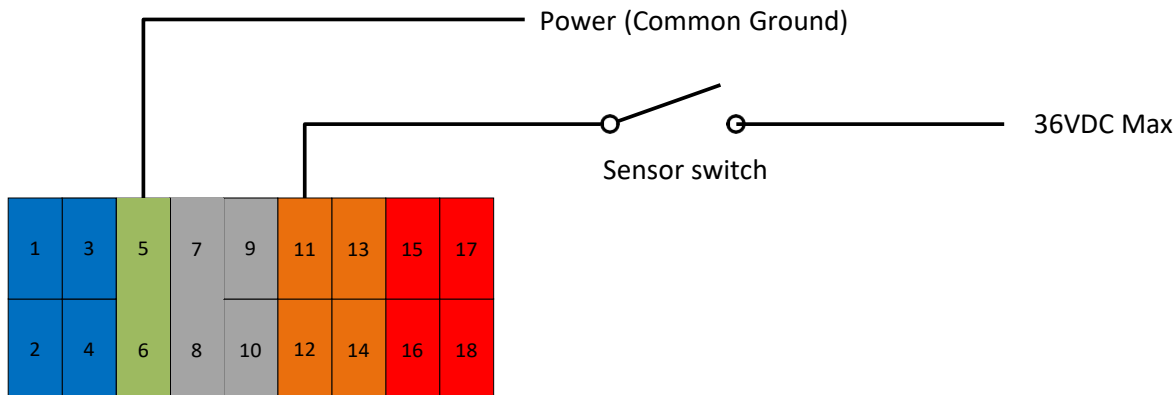


Example of Digital Input wiring:

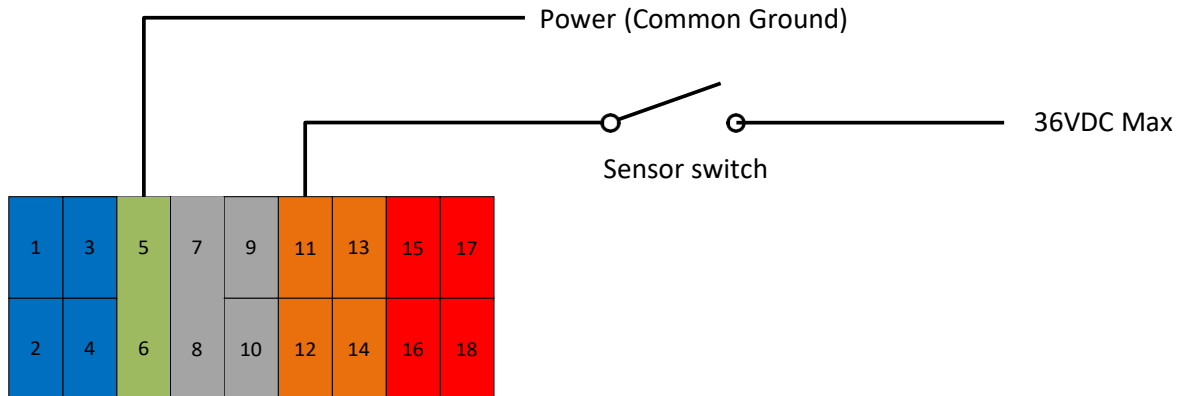


For analog voltage monitoring the measurement range is 0 to +10 volts with 10mV resolution. The input can withstand up to 36 volts. Note that the IN GND connection is referenced to the CTM-200's supply ground.

Example of single ended analog input wiring:

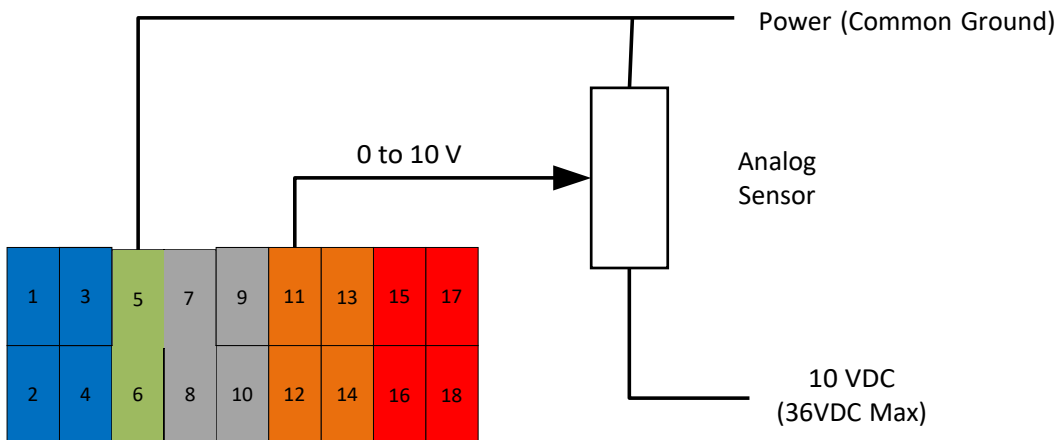

Example of Differential analog input wiring

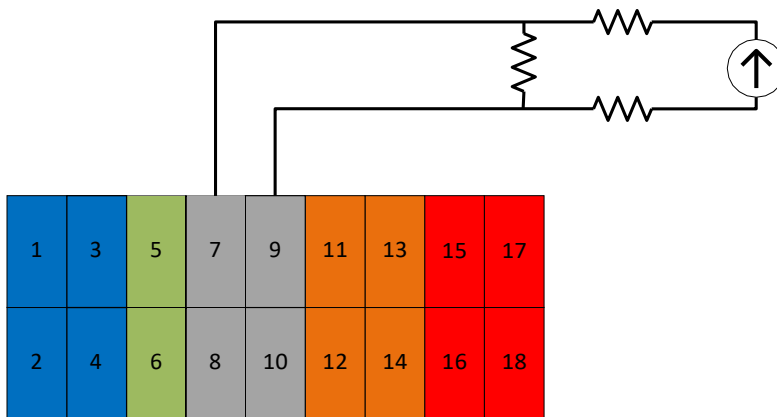

5.5 CAN2.OB Bus

The CAN interface is used primarily to interface to Vehicle sub-systems that support CAN communications. This includes all small and light duty vehicles manufactured in 2008 and later (ISO15765-4) and heavy-duty vehicles that support J1939.

An accessory CAN cable + OBDII or J1939 “Y Cable” is required to interface to a vehicle Engine Control Unit (ECU).

OBDII or J1939 Y-Cable



Accessory CAN cable:

Plug Part Numbers:

Phoenix Combicon connector #: **1952021** (with locking tab)
1953402 (without locking tab)

PIN1: CAN High Node
PIN2: Common Ground- Optional
PIN3: CAN Low Node
PIN4: Chassis Ground-Optional



6. Configuring the CTM-200

The CTM-200 will be ready for access and configuration 30–40 seconds after applying power.

A CTM-200 with factory default configuration provides 4 different ways of gaining access to its internal control interface. Once access has been obtained, the CTM-200 can then be configured either by command line or by using the built-in web interface:

Access Method:	Default Port Configuration	Your Device's Configuration
Ethernet Port 0 (LAN0)	192.168.1.1/24	192.168.1.2/24 or use DHCP
Ethernet Port 1 (LAN1)	192.168.2.1/24	192.168.2.2/24 or use DHCP
Wi-Fi	192.168.1.1/24 (bridged to LAN0)	192.168.1.2/24 or use DHCP
Serial port	RS232 DCE, 115200 8N1	RS232 DTE, 115200 8N1


Note: Serial connections require a terminal program such as 'COM 7.5', 'PuTTY' or 'minicom'.

The following paragraphs describe how to use the CTM-200's built-in web interface to configure the CTM-200. However, the web interface only provides a small subset of all available configuration options. To fully utilize the CTM-200's advanced options; it is required to use the command line interface. The full range of commands is beyond the scope of this document; however the most important ones will be presented here.

6.1 Login

To configure the CTM-200, the user must first login to the CTM-200 either via the WebGUI or terminal session. Both login methods use the same username and password.


Login	Default value
Username	admin
Password	Chameleon

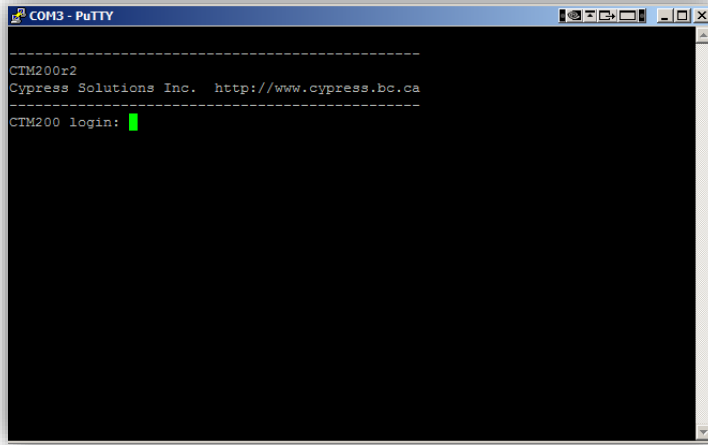


Setting the Telnet, SSH or Web GUI password is controlled using the cmd telnetpswd command


6.2 Web Interface

After logging in, the CTM-200 will show an overview screen with the most important device and network statistics, as well as links to configuration pages and documentation. The Web GUI is designed with a menu on the left and a series of “Tiles” that reflect the features of the product. As you resize your browser window the tiles will automatically move to match your browser size.

 CTM-200 Wireless Gateway	System Status	Cellular Status	LAN0 + Wifi AP	LAN1 Ethernet
	Gateway Device ID: 359225051825131	Network: LTE	IP Address: 192.168.1.1	IP Address: 192.168.2.1
	Firmware Version: v2.2.0.4808-91	Registered: Yes	Protocol: static	Protocol: static
	System Uptime: 14 min	Online: Yes	RX bytes:313750 (306.3 KiB)	RX bytes:0 (0.0 B)
	System Date: Tue Jul 21 21:59:30 UTC 2015	IP Address: 72.142.160.244	TX bytes:1149527 (1.0 MiB)	TX bytes:0 (0.0 B)
Current Users: 0	Data TX (MB): 5.4	Connections: 1	Connections: 0	
	Data RX (MB): 9.1			
Wifi Access Point	Engine Diagnostics	GPIO Status	GPS	
Wifi Access Point: Enabled	Odometer (km) (CTM) : 0	Outputs 0 0 0 0 0 0	GPS Fix: Invalid (0 sats)	
SSID: CTM200-2FA9	Fuel Used (L): 0	Inputs 0 0 0 0 0 0 0 0	Latitude: 49.2566	
Channel: 6	Idle Time: 0	Supply Voltage: 11.95V	Longitude: -122.9966	
	Engine Hours: 0		Altitude (m): -7.6500	
	View OBD data		PDOP: 99.0000	
			View in Map	
VUE Client	Installer Verification			
VUE Client: Enabled	ID:			
Check-In: Every 6 hours	Name:			
On Power Up: Enabled	Tested on: never			
Server: vue.cypress.bc.ca: 11650				

The Web GUI can easily be displayed on tablets and mobile devices that support web browsing, tiles will automatically resize to the browser window size.

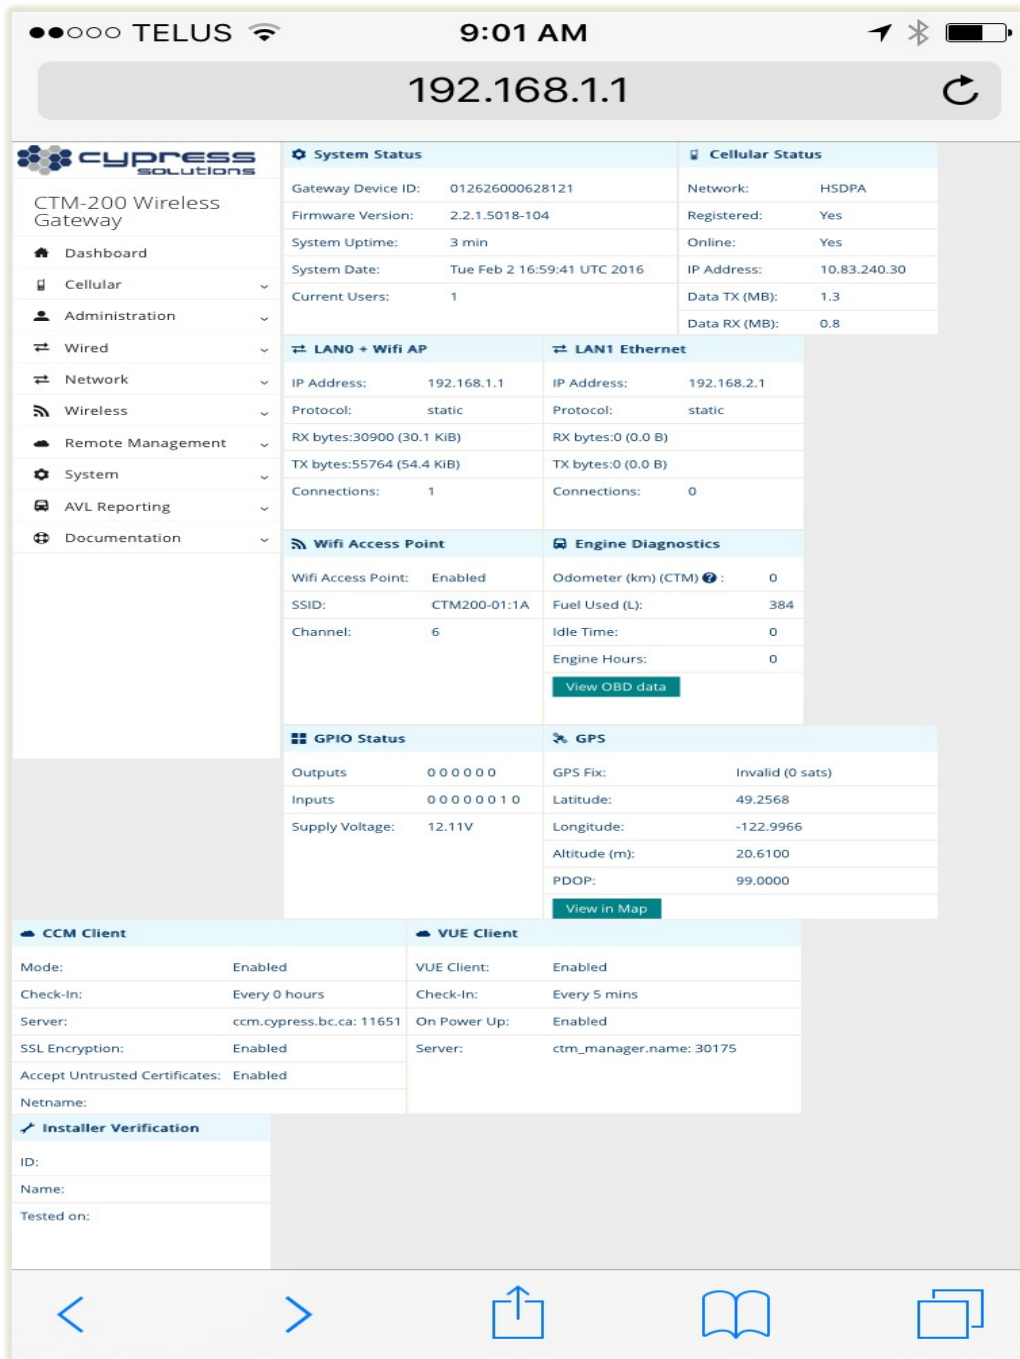

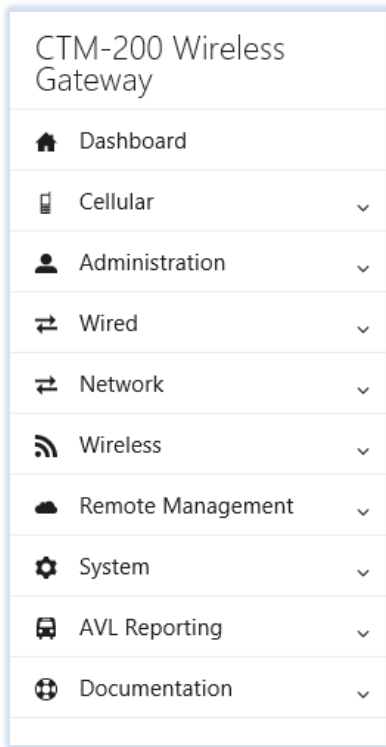

Name	Description
Dashboard	Returns you to home screen from any nested Tile view
Cellular	View Connection Status and configure Cellular Settings
Admin	Setup User Authentication and Access Control
Wired	Display Network Status, setup LAN and Serial Port
Network	Configure Port Forwarding and Static Routes
Wireless	Configure WIFI, Captive Portal, and Bluetooth
Remote MGMT	Configure Dynamic DNS, SNMP, and VUE Remote Management
System	Upload Firmware, view System Logging, enter Command Line, and Show Configuration
AVL Reporting	Setup Time Based, Distance and Speed, and Time, Distance, Heading reports
Documents	View User Manual, Alphabetical & Categorical Command Reference, Report Messages, and OBD2-J1939 Reference

Any changes that are made on the Web Interface the user will be prompted with a “Save Configuration” button. The “Save Configuration” will remain persistent as you navigate from one Tile to the next, requiring you only to save the configuration after all changes are complete.

To apply the configuration, press the “Restart Device” button on the left menu.



**CTM-200 Gateway is Restarting..
Please wait for 56 seconds**

6.3 Command Line Interface

Command line interface offers quick command entry but requires knowledge of the command structure. The above section that describes the Web GUI offers a user-friendly interface, and allows easy configuration of standard device features and simple AVL reports but is limited in scope.

There are approximately 400+ CTM specific commands. All CTM commands are prefixed with "cmd". The CTM-200 is running a linux™ operating system based on the 3.2 Linux kernel.

Command line configuration is accomplished by following the steps:

- Input the appropriate command(s) *"cmd....."*
- After entering commands issue a save command *"cmd save"*
- Reboot by physically removing power or entering the command *"cmd pwr mode 2"*

The Documentation tab of the Web GUI shows the command reference guide. These commands can be entered in the "Enter command:" box or they can be entered in separate console session using tools like "Putty" terminal emulator.

```
-----  
CTM200r2  
Cypress Solutions Inc.  http://www.cypress.bc.ca  
-----  
CTM200 login: admin  
Password:  
Last login: Wed Dec 11 10:38:41 -0800 2013 on /dev/pts/0.  
root@CTM200:/#
```


In addition to the CTM configuration commands, the CTM-200 provides common GNU/Linux shell and file utilities accessible through console, telnet or SSH sessions. Shell scripts can be used for custom control and management and can be integrated with the CTM-200 to enable triggering of scripts on device-generated events. The system supports both a FTP server and client, an SSH/SCP server, and a HTTP webserver.

6.4 Configuring, Cellular Wireless Network Parameters

Cellular configuration is accessed by the “Cellular” select button on the left of the Web GUI.

For most devices, the following information is required:

- An activated SIM card needs to be installed in the CTM-200.
- The correct installed module must be selected
- The mobile APN or Access Point Name.
- In almost all cases, ‘Username’ and ‘Password’ can be left empty

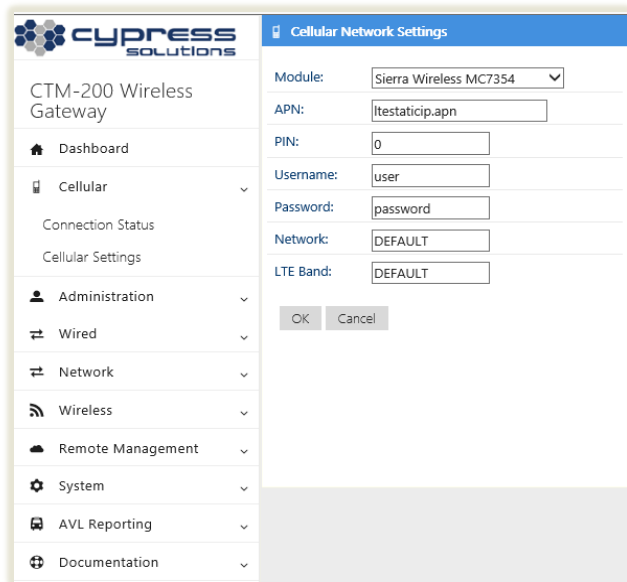

The screenshot displays the 'Cellular Network Settings' page of the CTM-200 Wireless Gateway. The left sidebar contains a navigation menu with options: Dashboard, Cellular (selected), Connection Status, Cellular Settings, Administration, Wired, Network, Wireless, Remote Management, System, AVL Reporting, and Documentation. The main content area is titled 'Cellular Network Settings' and includes the following fields:

Module:	Sierra Wireless MC7354
APN:	lttestaticip.apn
PIN:	0
Username:	user
Password:	password
Network:	DEFAULT
LTE Band:	DEFAULT

At the bottom of the settings area, there are 'OK' and 'Cancel' buttons.

Contact Cypress Solutions if the module you are trying to install is not shown in the drop-down list on the Web interface.

Enter the APN and select the embedded module name from the “Module” drop down list.

Press the “OK” button, “Save Configuration” to reboot the CTM-200.

After the device powers on the CTM-200 will have an IP address as shown in the “status” window.

Cellular Status	
Network:	LTE
Registered:	Yes
Online:	Yes
IP Address:	184.151.220.29
Data TX (MB):	3202.9
Data RX (MB):	46835.3

RF Signal	Connection Status	Mobile Account Information
Overall Signal Quality	Registered	IMSI
RSSI	Connected	Mob.Country Code (MCC)
RSRP	Radio State	Mob.Network Code (MNC)
RSRQ	SIM State	ICCID
Signal/Noise (SINR)	Packet Sw (PS) State	Subscriber Number (MDN)
Cellular Network		
Carrier Name	Mob.Mgmt (MM) State	
Network Type	Mobile Equipment Status	
Band	CTM200 Uptime	
Channel Bandwidth	Radio Uptime	
Roaming	Radio Temperature	
Rx Channel	Mobile Equipment Information	
Tx Channel	Radio Model	
Cell ID	Cypress CCM Hostname	
Loc. Area Code (LAC)	IMEI	
Track: Area Code (TAC)	MEID	
Current MCC	ESN	
Current MNC	Factory S/N (FSN)	
	Radio Firmware Version	
	Provision Status	

If the IP address displayed is 0.0.0.0 or the online state is “NO” then the CTM-200 was unable to negotiate a wireless connection. Check that the APN was entered correctly, and the account is active.

The CTM-200 is designed to operate as an “always on, always connected” device. After successful configuration the CTM-200 will attempt to maintain a network connection at all times. If the connection is lost due to out of coverage or other reasons, the CTM-200 has internal logic to attempt to quickly reconnect to the network. During loss of cellular connectivity report data destined for Fleet tracking servers is stored in non-volatile memory. This data will be automatically forwarded when network connectivity is re-established.

Note: If the cellular device is incorrectly configured the CTM-200 will automatically power cycle approximately every 4 minutes until it is configured for the correctly installed module.

6.5 Wi-Fi Networks

Wi-Fi configuration is accessed by the “Wi-Fi Access Point” or “Wi-Fi Client” select button on the left of the Web GUI

Wi-Fi support is based on 2.4 GHz IEEE 802.11 b/g/n technology. Access Point and Client configurations are supported with standard features such as SSID, Channel, WEP/WPA/WPA2/PSK/PSK2/TKIP Encryption, key and RADIUS server support. EAP PEAP/TTLS and RADIUS authentication is also supported.

If Wi-Fi is configured as an Access Point the wireless connection is available by default at **192.168.1.1**.

The Wi-Fi can be un-bridged from LAN0 interface if you wish to have the WLAN on its own subnet, for example, **192.168.0.1/24**

Default Wi-Fi configuration is to have the Wi-Fi configured as an access point. Default SSID is **CTM200-XX:XX** where **XX:XX** are the last 4 digits of the CTM-200 mac address, for example: CTM200-02:9B and the default password is CypressAccess.

There are two modes of operation for Wi-Fi, Access Point or AP provides connectivity to connected devices. Client mode uses another AP to provide connectivity for the CTM-200:

6.5.1 Access Point

CTM-200 serves as an internet access point to other Wi-Fi enabled devices, up to 7 devices can be connected to the CTM-200 Wi-Fi access point at any one time.

Wifi Access Point Configuration

Mode	Access Point Enabled ▼
Country Code	CA ▼
SSID	CTM200-0b:a0
Encryption Type	WPA2 (PSK) ▼
Pre-shared Key	CypressAccess
HW Mode	802.11NG ▼
Channel	6 - 2.437 GHz ▼
Broadcast SSID	Enabled ▼
AP Isolation	<input type="checkbox"/>

OK
Cancel

6.5.2 Client

CTM-200 can take advantages of existing Wi-Fi networks for data communications. Client configuration can co-exist with cellular data connections, or the device can function as a Wi-Fi client with no cellular module installed. The CTM-200 has internal logic to manage the “priority” of the connection so in the cases where two wireless networks are available, cellular and Wi-Fi. The priority is set by the WI-FI mode chosen. With Wi-Fi client enabled, this means first the CTM uses your Wi-Fi client connection, and if that is not available it searches for cellular.

Use the **device cell**, **device Wi-Fi**, and the **device priority** commands to define the device priority for Cell and Wi-Fi client configurations.

<div style="background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">Wifi Mode</div> <div style="padding: 5px;">Mode: Wifi Access Point Enablec ▼</div> <div style="text-align: right; padding-top: 10px;"> OK Cancel </div>	<div style="background-color: #0056b3; color: white; padding: 5px; font-weight: bold;">Wifi Client Configuration</div> <div style="padding: 5px;">SSID: CTM200-0ba0</div> <div style="padding: 5px;">Encryption Type: WPA2 (PSK) ▼</div> <div style="padding: 5px;">Pre-shared Key: CypressAccess</div> <div style="padding: 5px;">Channel: 6 - 2.437 GHz ▼</div> <div style="text-align: right; padding-top: 10px;"> OK Cancel </div>
--	--

For more detailed information on device priority visit the online Cypress CTM-200 Command Reference Guide: https://cypress.bc.ca/docs/cmd_ref/

7. Additional Features

7.1 Automatic Power Control

The CTM-200 supports supply voltages ranging between 5.5 VDC and 36 VDC. At **default settings** power supply voltage must be a minimum of 9VDC for the CTM-200 to operate.

Note: In some vehicle operation, when starting the engine, the vehicle supply voltage will dip below 9VDC momentarily. The CTM-200 can handle power dips below 9VDC down to 6VDC. If continual operation is required below 9.0 V, the CTM-200 needs to be configured using the *"cmd pwr vcct"* command.

The Chameleon CTM-200 gateway has three power modes:

Mode	Current @ 12V	Description	Mode change event
Operation	300 mA	In this mode the device is fully powered up and ready to receive or make network connections	The device will go back into shutdown/standby mode when the ignition/standby signal is deactivated or upon expiry of the power ON timer if configured.
Shutdown	< 3mA	Only the CTM-200's power management circuits are operating.	The device will go back into operation mode when the ignition/standby signal is activated, wake on event occurs (e.g., input, temperature, motion), or upon expiry of the power OFF timer as configured.

The CTM-200 can be configured to remain on for a defined period after the standby/ignition signal has been turned off. This enables the gateway to continue sending position reports or be used for data operations even after the vehicle ignition has been switched off – e.g., for short duration driver breaks.

When in its power shutdown mode, the gateway may be configured to resume full operation by monitoring events such as:

- Acceleration
- GPS location (on board Geo-Fence)
- Time
- Speed
- Temperature
- Voltage
- Input events

- Man Down Pendant alarms

7.2 Power Consumption

The power consumption of the CTM-200 gateway will depend on its supply voltage, its current operating function and its RF environment.

The following table is provided to assist application integrators in defining the power requirements for their specific application.

Power Consumption	Weak RF signal(12V)	Strong RF signal(12V)	Weak RF signal(24V)	Strong RF signal(24V)
Shutdown Mode	2 mA typical	2 mA typical	3 mA typical	3 mA typical
Downloading (Receive data)	450mA max	350mA max	220mA max	195mA max
Uploading (Transmit data)	500mA max	390mA max	260mA max	210mA max

7.3 Device Reset

The CTM-200 gateway may be manually reset via the front panel using a <1mm diameter (0.04") wire tool (a standard paper clip). This can be used to cause the gateway to reset its operation, to reset the LAN IP settings, or to reset the gateway's configuration to the factory shipped configuration.

Power reset: Press and hold for **1 to 3 seconds**

LAN IP reset: Press and hold for **3 to 10 seconds**

- The PWR LED will turn off at the 3-second mark and start flashing slowly once the button is released. It keeps flashing until the LAN IP reset is complete.
- LAN IP addresses will be reset as follows:
 - LAN0 Ethernet port: 192.168.1.1
 - LAN1 Ethernet port: 192.168.2.1








Shipped configuration reset: Press and hold for **10 or more seconds**

- The PWR LED will turn off at the 3-second mark and start flashing rapidly at the 10-second mark. It keeps flashing until the configuration reset is complete. The CTM-200 will be restored to the configuration that was loaded on the unit at the time of shipping to the customer.

Reset Type	Hold Duration (sec)
Power Reset	>1 to <3
LAN IP Reset	3 to <10
Shipped Configuration Reset	10+

7.4 LED Indicators

There are seven LED indicators on the CTM-200 top. These are used to show the status and operation of the device. For wireless data devices that provide network diagnostic information:

LED	Description	Solid	Blinking	Off
 Wi-Fi	Wi-Fi status	CTM-200 serving as an Access Point or connected as a Client	CTM-200 configured as a Client but not connected	Wi-Fi not enabled
 BLUETOOTH	Bluetooth status	Connected with another Bluetooth device	Bluetooth enabled but not paired	Bluetooth not enabled
 MODE	Indicates the type of wireless data connection	3G Connection (EV-DO/HSPA)	4G Connection (LTE)	No cellular registration or 2G only or not available due to RF module limitations
 GPS	Status of the GPS module or external GPS device	GPS module or external GPS device has a valid position fix	GPS module or external GPS device does not have a valid position fix	
 IP/DATA	Data is being transmitted or received	Solid on if CTM-200 has an IP address on the wireless network	Flashing intermittently if data packets are sent/received via the wireless network	No data being transmitted, not connected to the wireless network
 RF	Status of the device on the wireless network	Very good signal > 75% signal quality	Slow blink 0-35% quality Med. blink 35-55% quality Fast blink 55-75% quality	Device is not detecting a valid RF signal or is not registering on the wireless network
 PWR	Power status of the device	Full operating mode and able to connect	Device is in standby mode	Device has no power

8. General Troubleshooting Operation

All LEDs remain off when the device is powered	<ul style="list-style-type: none"> No power is being applied to the CTM-200 Check power supply make sure min. 9 VDC is being supplied
PWR LED flashing	<ul style="list-style-type: none"> The device is in standby mode Ensure the standby signal is connected to greater than 9VDC Ensure the supply voltage is greater than 9VDC. Remember that the device is designed to go into standby mode if the standby signal is off after a configured time period (e.g. 10 seconds by default)
PWR LED ON all other LED OFF	<ul style="list-style-type: none"> Device is booting Linux
Device is constantly rebooting every 4 minutes with no user input. Only PWR LED and GPS LED (solid or flashing) are on.	<ul style="list-style-type: none"> Incorrect cellular device is configured. The CTM-200 is configured by default to auto connect to a cellular network. If the CTM-200 determines that communication with the internal cellular radio module or device is not working, it will attempt to reset the communication port; this will result in continual system reboots if incorrect module/device is selected.
GPS LED flashing	<ul style="list-style-type: none"> No valid GPS fix. The GPS antenna requires a clear view of the sky to obtain a valid GPS fix. The time to fix can vary from a few seconds to several minutes depending on conditions. GPS LED flashing has no impact on cellular connectivity.
RF LED OFF MODE LED OFF IP/DATA LED OFF	<ul style="list-style-type: none"> RF signal may not be available; CTM-200 is located in an area of no cellular activity. Cellular device is not registered on the network; make sure radio module/device/SIM has been activated on the network. Incorrect configuration of internal radio module, ensure correct device has been configured
IP/DATA LED OFF RF LED (solid or flashing) MODE LED (solid or flashing)	<ul style="list-style-type: none"> CTM-200 is registered on the network and is in an area of 3G or 4G coverage but device has not obtained an IP address <i>cmd ipadr</i> will return 0.0.0.0
MODE LED OFF All other LED's ON (solid or flashing)	<ul style="list-style-type: none"> CTM-200 is in an area where no 3G or 4G connection is available (2G only) Cellular module/device does not support diagnostics so MODE LED is disabled. Device may still perform at 3G or 4G levels

9. Time

The CTM-200 has an onboard real time clock. The real time clock is used to provide timestamp information for system generated events and reports. The real time clock is capable of keeping system time with all power removed from the CTM-200 between 30 and 40 hours at room temperature.

9.1 Time Synchronization

The real time clock (RTC) will synchronize with external sources. External time sources are time from GPS satellites, Time from the Cellular network and time from an NTP server.

Available features:

- Set the period for time synchronization to external sources
- GPS, NTP server or cellular network can be used as a time synchronization source

9.2 Time zones

The default time zone is UTC but is user configurable.

10. Device Management

10.1 Upgrading and Configuring

The CTM-200 firmware can be upgraded locally or remotely over the wireless connection. Firmware images “.tar” files can be downloaded from the Cypress Solutions repository or hosted on customer supplied repositories or locally on computer on a local network. In most cases it is not necessary to upgrade firmware unless a specific feature or enhancement has been added. The firmware update process uses a redundant firmware image system. If for any reason the firmware upgrade fails, the previous firmware will load allowing the process to be repeated.

Notes:

- It is highly recommended to test all device configuration and operation before deploying devices to remote locations.

- Not all wireless networks offer "public" IP addresses that are remotely accessible; some are firewall protected to allow access from either the same IP pool only or restricted IP addresses. Contact your wireless network provider or administrator to determine what options are available.
Some device management options can work with dynamic/non-routable IP addresses.
- Some networks will force device IP addresses to change at regular intervals. Without proper configuration, this could cause a remote device to become inaccessible if the device IP address is not known. The CTM-200 can be configured to generate a report when the IP address of the device changes.
- Incorrectly configuring the device could cause the device to become inaccessible, use caution when issuing commands via any remote mechanism.

10.2 How to access the CTM-200 remotely

There are multiple ways to access and configure a CTM-200 remotely:

- **SMS** (allows commands to be sent to the CTM-200 via SMS; this command only applies to devices that support SMS, contact Cypress Solutions for more details)
- **SNMP** Simple Network Management protocol support
- **Telnet** and **SSH** (secure shell) (access to command line interface (CLI))
- **Device Embedded Web Page** (access to web page/browser based configuration)
- **ULCP** (allows configuration of digital outputs only using ULCP binary format)
- **CTM Manager** device management software available from Cypress Solutions.

10.3 SMS

The CTM-200 gateway has the capability of setting up SMS reports and using SMS commands to perform general tasks of processing sent and received SMS messages. These SMS messages can be sent to or received from a carrier's SMS web portal or a mobile phone.

For more details on the use of SMS with the CTM 200, refer to the *CTM 200 Application Notes* page online at <https://www.cypress.bc.ca/resources/> and refer to Application Notes in CTM-200 section.

Note: SMS support is dependent on the embedded radio module, carrier and account options; please contact Cypress Solutions if you have questions regarding SMS functionality

There are two types of SMS commands that the CTM-200 gateway accepts: (1) **\$0cmd** - command that does not require the response to be sent back to the sender and (2) **\$1cmd** - command that does require

the response to be sent back to the sender. Both commands can act as a remote management and configuration tool for CTM-200 gateways.

Any of the CTM-200 commands can be appended after \$0/\$1 except for the following commands, which are discarded by the SMS command processor:

```
cmd event dump
cmd showconfig
cmd factory
```

No configuration of the CTM-200 is required for it to accept SMS commands

Message format:

\$1<ctm command> if the command provides feedback.

\$0<ctm command> if the command does not provide feedback.

The first two characters of the message should always be **\$0** or **\$1**. Any of the CTM-200 commands can be appended after **\$0** or **\$1** except for the commands discarded by the SMS command processor (See list above.). Moreover, multiple commands separated by **<CR>** or **<CR><LF>** can be sent in a single SMS message\

Examples:

1. Return firmware version to SMS sender

```
$1cmd ver
```

Returns: 5555551212:r2.0.5.2779-144

2. Issue command to power cycle only

```
$0cmd pwr mode 2
```

Note: commands that output more than 160 characters will not generate feedback.

sendsms -P<PHONE #> -T<\$0 or \$1 ctm command> sends ctm command to another CTM-200

SMS features:

- Define an SMS “friends list” which limits incoming SMS commands received to a specific set of phone numbers
- simple sms send of a text string from a CTM-200

10.4 SNMP

The CTM-200 supports the Simple Network management Protocol. The CTM-200 can act as an SNMP (Simple Network Management Protocol) agent to report device information to an SNMP manager. SNMP version 2 allows a user to retrieve CTM-200 information such as model, device ID, IMEI, RSSI, PAD IP, PAD port, GPS coordinates, WLAN and LAN MAC and IP addresses, etc.

The CTM-200 listens on UDP port 161 for SNMP requests.

For more details on SNMP support please contact support@cypress.bc.ca

10.5 CCM Manager

All CTM 200s have the ability to be managed remotely, thereby simplifying management of large fleets. For this purpose, Cypress Solutions offers **Cypress Cloud Manager (CCM)** as a configuration and management platform. Cypress Cloud Manager (CCM) is part of Cypress’s suite of cloud-based services called **Cypress Cloud Services (CCS)**.

Communication between the CTM 200 and the CCM server is always initiated by the CTM 200. This allows management even when the CTM 200 uses a dynamic IP address or in cases where the wireless carrier deploys Network Address Translation (NAT). This implies that there is a time delay between scheduling a configuration change or firmware upgrade server-side, and the time when these actions are executed on the CTM 200.

All CCM traffic is fully SSL encrypted.

Note: By default, CCM functionality is turned on. The CTM 200 will attempt to contact Cypress Solution’s CCM server. This allows Cypress support staff to access the unit remotely for troubleshooting and support purposes. If you do not wish to permit access, please disable CCM.

11. Reporting

Reports are generated by the CTM-200 and are linked to events or triggers. The CTM-200 uses an event-report-message based system to send data to AVL or fleet management servers. Reports consist of messages that provide information about the event or trigger. The most common and widely used report is a GPS report. A GPS report can be triggered by a number of conditions, for example, time, speed, distance, and heading. Reports are typically delivered via the wireless link (UDP or TCP), but they can also be delivered via Serial, Ethernet, and email, SMS or stored in files for file based reporting.

The type and a and nature of reports from the CTM-200 can be broken down into 3 main categories

- Regular Interval AVL (Automatic Vehicle Location)
- Irregular or event trigger based (Rapid deceleration or acceleration, tire blowout (, Man Down Alert
- Infrequent Interval (data that is not required in real time, fuel values, odometer values, engine hours, idle time)

11.1 Regular Interval Reports (AVL)

A regular interval report is normally an AVL (Automatic Vehicle Location) type report containing location (lat/long), heading, and speed.

AVL reports are triggered on a frequent basis to match the needs of the business unit. More frequent reports provide a more detailed path of the vehicle but consumes more data. Less frequent reports have less detail but consume less data.

The best compromise is a event trigger mechanism that utilizes, time, speed, distance and heading as logic to determine the best interval to send a report. For example, if a vehicle is stationary there is no need to send AVL reports every few seconds as the report is not changing

The CTM-200 Web GUI provides a quick mechanism for configuring a regular AVL Interval report.

Time Based Reports

CTM-200 Wireless Gateway

- Dashboard
- Cellular
- Administration
- Wired
- Network
- Wireless
- Remote Management
- System
- AVL Reporting
 - Time Based
 - Distance and Speed
 - Time, Distance, Heading
- Documentation

Report on Time, Distance, Heading Change

Time Interval (secs):	<input type="text" value="60"/>
Distance (meters):	<input type="text" value="0"/>
Heading Change (degrees):	<input type="text" value="0"/>
Minimum Report Rate (secs):	<input type="text" value="0"/>
Report Message:	<input type="text" value="Cypress compact \$PGPS"/>

Remote Report Server

Hostname or IP Address:	<input type="text" value="tracking.myvue.ca"/>
Port:	<input type="text" value="8300"/>
Protocol:	<input type="text" value="UDP (consumes less data)"/>

Distance and Speed Reports

CTM-200 Wireless Gateway

- Dashboard
- Cellular
- Administration
- Wired
- Network
- Wireless
- Remote Management
- System
- AVL Reporting
 - Time Based
 - Distance and Speed
 - Time, Distance, Heading
- Documentation

AVL: Distance and Speed Based Reports

Report every <input type="text" value="0"/> meters while traveling between a	
Minimum Speed of <input type="text" value="0"/> Km/hr	
Maximum Speed of <input type="text" value="0"/> Km/hr, but	
Limit reports to one every <input type="text" value="0"/> secs. (Set to 0 if not required)	
If vehicle is NOT moving, generate a report every <input type="text" value="0"/> secs.	
Report Message:	<input type="text" value="Cypress compact \$PGPS"/>

Remote Report Server

Hostname or IP Address:	<input type="text" value="tracking.myvue.ca"/>
Port:	<input type="text" value="8300"/>
Protocol:	<input type="text" value="UDP (consumes less data)"/>

Time, Distance, Heading Reports

The screenshot shows the Cypress Solutions web interface for configuring reports. The left sidebar contains a navigation menu with the following items: Dashboard, Cellular, Administration, Wired, Network, Wireless, Remote Management, System, AVL Reporting (with sub-items: Time Based, Distance and Speed, Time, Distance, Heading), and Documentation. The main content area is titled 'Report on Time, Distance, Heading Change' and contains the following configuration fields:

- Time Interval (secs): 60
- Distance (meters): 0
- Heading Change (degrees): 0
- Minimum Report Rate (secs): 0
- Report Message: Cypress compact \$PGPS

Below these fields is a section for 'Remote Report Server' with the following configuration:

- Hostname or IP Address: tracking.myvue.ca
- Port: 8300
- Protocol: UDP (consumes less data)

At the bottom of the form are 'OK' and 'Cancel' buttons.

11.2 Irregular Interval Reports

An Irregular interval report is typically a report generated by a sensor or switch that triggers an event. The event is random in nature by that there may be no pattern as to when the event triggers, but there is a requirement from the business unit that identifies the event in real time to facilitate an action. Irregular reports can trigger as frequently as Regular reports but the trigger is not typically AVL based.

Examples of Irregular reports are:

- Acceleration
- Driver ID
- Engine parameters
- Auxiliary equipment such as Tire pressure Monitors, spreader controller data, weight systems

For example to send a “hard acceleration” event or “hard brake” event an “accelcond” would be set to define the “trigger” points. The CTM-200 monitors the acceleration in real time and when the condition is met a report is generated that sends the message, in this case a message containing relevant acceleration data

11.3 Infrequent Interval Reports

An Infrequent interval report is typically a report generated by an event that is infrequent. In many cases “ignition” is considered infrequent as there can be long periods between ignition events. The idea behind the Infrequent Interval report is that these reports typically contain information is useful but not required in a real time environment

Examples of Infrequent reports are:

- Odometer
- Fuel
- Idle
- Engine Hours
- Wireless Data consumed

An ignition condition “igncond” is typically used to trigger an infrequent report. The ignition condition triggers based on the state of the ignition, OFF/ON etc.

11.4 Triggers or event conditions

- Acceleration trigger condition
- Data event trigger
- Geo-route violation conditions
- GPS trigger condition (Speed, Distance travelled, heading change, time)
- Idle trigger condition
- Ignition trigger condition
- GPIO trigger condition
- MODBUS exception condition
- Engine diagnostics trigger condition
- Power up trigger condition
- Supply voltage trigger condition

Irregular and Infrequent reports are triggered by the below conditions, the GPS condition will typically trigger a regular AVL type report.

Triggers or events	Description	Event Label
GPS	8 available conditions can be triggered on time, speed (low speed, high speed), distance travelled, heading change.	GPSx
Input Condition	8 available conditions, time based, alarm based on input states of 6 inputs, up to 2 inputs can be compared in each condition. IP change trigger	GPIOx
Ignition	8 available conditions, triggers on ignition going off, on or transition.	IGNx
OBDII or J1939	8 available conditions. Time based, or based on a valid OBDII or J1939 parameter being =,>,< the reported value from the vehicle ECU	OBDx
Power Up	8 available conditions, triggers on the device being powered up.	PUPx
Voltage	8 available conditions, trigger when a supply voltage is below, above or a supply threshold is passed.	VCCx
Acceleration	8 available conditions, triggers when an acceleration, deceleration or lateral acceleration threshold has been met.	ACCELx
Geo Route	In Zone or Out of Zone trigger, or alarm triggers based on crossing of zone threshold.	GEOx
Idle	Trigger a report when an idle time is exceeded	IDLExSTART IDLExEND
Data	Triggers when a pre-configured threshold is exceeded.	DATAx
MODBUS	Trigger MODBUS or MODBUS exception reports	
Man Down	Triggers when Man-Down Accessory device generates an event (CTM-200 must be configured to listen for traffic and optional WPAN Gateway must be installed)	MANDOWNx
Boomtracker	Triggers when short range wireless asset tracker accessory comes within range of CTM-200 (CTM-200 must be configured to listen for traffic and optional WPAN Gateway must be installed).	BOOMx
Proximity Card/RFID/I-Button	Triggers when a compatible RFID device sends a message to the CTM-200 via external peripheral, RFID reader, etc. (uses modified message 114, \$PGPS for payload)	RFIDx
External Equipment	Triggers when supported external equipment sends data to CTM-200 serial port. Typical External equipment include salt spreader, weigh systems, etc. (uses modified message 114, \$PGPS for payload)	EXTz

11.5 Report Definition

A report definition consists of:

- Transport protocol (UDP, TCP, SMS, email, asynchronous, file based)
- Destination IP address

- Destination Port address
- Group of messages to deliver.

Each report definition is capable of delivering up to 4 messages per report. 8 unique report definitions each can be associated to GPS and GPIO conditions. All other event conditions can have up to 999 report definitions shared between the various report triggers or events.

An example of an “acceleration report” definition:

```
cmd accelcond 1 5 -30 0 5    #set the acceleration condition or trigger, in this case condition #1
cmd accelreport 199        # bind acceleration condition #1 to report definition #99
cmd reptime 99 0 3 1       # use UDP protocol with SNF enabled
cmd repaddmes 99 114 136   # include a GPS with ID message(114) and acceleration message (136)
cmd repremip 99 65.61.200.71 # destination IP address
cmd repremport 99 8300     # destination Port number
```

11.6 Report Messages

Messages are defined using a standard NMEA message format; some messages are available in a binary format.

ASCII	Description
\$	Start character
ABC... or PABC	Message type. Messages starting with P are non-standard proprietary.
<string>,<string>	Message body. Multiple strings are separated with commas.
*	Message terminator
hh	Message checksum
<CR><LF>	Carriage return, line feed

Standard NMEA Sentences

Decimal ID	Message Name	Message Type	Message description
16	\$GPGLL	Standard NMEA	GPS NMEA GLL Geographic position, latitude / longitude message
80	\$GPGGA	Standard NMEA	GPS NMEA GGA Fix Data message- \$GPGGA
82	\$GPRMC	Standard NMEA	GPS NMEA RMC Recommended minimum specific GPS/Transit data message
83	\$GPVTG	Standard NMEA	GPS NMEA VTG Track made good and ground speed message
84	\$GPGSA	Standard NMEA	GPS NMEA GSA GPS DOP and active satellites message
118	\$GPGSV	Standard NMEA	GPS NMEA GSV GPS Satellites in view message
127	\$GLGSV	Standard NMEA	GLONASS NMEA GSV message-\$GLGSV
128	\$QZGSV	Standard NMEA	QZSS NMEA GSV message-\$QZGSV

Cypress Solutions Proprietary NMEA Sentences

Decimal ID	Message Name	Message Type	Message description
3	\$PMID	Cypress Proprietary NMEA	Modem ID
4	\$PAID	Cypress Proprietary NMEA	Asset IDs
19	\$POUTD	Cypress Proprietary NMEA	Digital Output States
20	\$PIND	Cypress Proprietary NMEA	Digital Input States
21	\$PINA	Cypress Proprietary NMEA	Analog Input #1 status
22	\$PINA	Cypress Proprietary NMEA	Analog Input #2 status
23	\$PINA	Cypress Proprietary NMEA	Analog Input #3 status
24	\$PINA	Cypress Proprietary NMEA	Analog Input #4 status
25	\$PINA	Cypress Proprietary NMEA	Analog Input #5 status
26	\$PINA	Cypress Proprietary NMEA	Analog Input #6 status
27	\$PINA	Cypress Proprietary NMEA	Analog Input #7 status
28	\$PINA	Cypress Proprietary NMEA	Analog Input #8 status
29	\$PNETD	Cypress Proprietary NMEA	Detailed Network status (output of RFSTATS)
30	\$PCTM	Cypress Proprietary NMEA	Network status
31	\$PDATA	Cypress Proprietary NMEA	Wireless link TX/RX data count, proprietary NMEA message- \$PDATA
32	\$PSNF	Cypress Proprietary NMEA	Store and Forward messages
33	\$PWIFI	Cypress Proprietary NMEA	Wifi Client Network status
34	\$PSIG	Cypress Proprietary NMEA	Signal Quality Message (output of RFSTATS)
35	\$PNETD1	Cypress Proprietary NMEA	Detailed LTE dynamic Network parameters (output of RFSTATS)
36	\$PNETD2	Cypress Proprietary NMEA	Detailed LTE static Network parameters (output of RFSTATS)
114	\$PGPS	Cypress Proprietary NMEA	GPS with modem ID (based on RMC)
115	\$PKML	Cypress Proprietary NMEA	NMEA Message for Google Earth application (kmlserver)
116	\$PPWR	Cypress Proprietary NMEA	Power status
117	\$PRFI	Cypress Proprietary NMEA	CDMA/EV-DO Network diagnostic report
119	\$POBDA	Cypress Proprietary NMEA	OBD II Group A
120	\$POBDB	Cypress Proprietary NMEA	OBD II Group B
121	\$POBDC	Cypress Proprietary NMEA	OBD II Group C
122	\$POBDD	Cypress Proprietary NMEA	OBD II Group D
123	\$POBDE	Cypress Proprietary NMEA	OBD II Group E (CTM-200 only)
124	\$POBDF	Cypress Proprietary NMEA	OBD II Group F (CTM-200 only)
125	\$POBDG	Cypress Proprietary NMEA	OBD II Group G (CTM-200 only)
126	\$POBDH	Cypress Proprietary NMEA	OBD II Group H (CTM-200 only)
135	\$PACC	Cypress Proprietary NMEA	X/Y/Z Acceleration
136	\$PACCEL	Cypress Proprietary NMEA	Acceleration/Deceleration with Modem ID
137	\$PODO	Cypress Proprietary NMEA	GPS Odometer with Modem ID
138	\$PACCEL2	Cypress Proprietary NMEA	Acceleration/Deceleration (2nd source) with Modem ID
139	\$PLACCEL	Cypress Proprietary NMEA	Lateral Acceleration with Modem ID (CTM-200 only)
140	\$PFUEL	Cypress Proprietary NMEA	FUEL ECONOMY with Modem ID (CTM-200 only)
141	\$PIDLE	Cypress Proprietary NMEA	IDLE TIME with Modem ID, proprietary NMEA message- \$PIDLE (CTM-200 only)
142	\$PFUELR	Cypress Proprietary NMEA	FUEL RATE(L/100Km) with Modem ID (CTM-200 only)
150	\$PMEX	Cypress Proprietary NMEA	Modbus Master Exception (CTM-200 only)
151	\$PMBM	Cypress Proprietary NMEA	Modbus slave device 1's state queried by Modbus Master (CTM-200 only)
152	\$PMBM	Cypress Proprietary NMEA	Modbus slave device 2's state queried by Modbus Master (CTM-200 only)
153	\$PMBM	Cypress Proprietary NMEA	Modbus slave device 3's state queried by Modbus Master (CTM-200 only)
154	\$PMBM	Cypress Proprietary NMEA	Modbus slave device 4's state queried by Modbus Master (CTM-200 only)

X	\$PEVENT	Cypress Proprietary NMEA	Trigger/event message - \$PEVENT (CTM-200 only)
X	\$PGRT	Cypress Proprietary NMEA	Geo-Route alarm/alert message with Modem ID - \$PGRT (CTM-200 only)
1000-1999	\$PCYP	Cypress Proprietary NMEA	PCYP message

Other Vendor Proprietary NMEA Sentences

Decimal ID	Message Name	Message Type	Message description
129	\$BTVEG	Vendor Proprietary NMEA	Intergraph's GPS message

Cypress Solutions ULCP Messages

Decimal ID	Message Name	Message Type	Message description
40		Cypress Proprietary Binary	Device phone number, PAD Port/Type, serial port baud
85	ULCP	Cypress Proprietary Binary	ULCP binary format GPS data message
86	ULCP	Cypress Proprietary Binary	ULCP binary format GPS lat/lon message
88	ULCP	Cypress Proprietary Binary	ULCP binary format acceleration/decleration event data with GPS
89	ULCP	Cypress Proprietary Binary	ULCP binary format Modem ID/firmware revision/odometer data
90	ULCP	Cypress Proprietary Binary	ULCP binary format odometer data
92	ULCP	Cypress Proprietary Binary	ULCP binary format wireless Link TX/RX Data Count with Modem ID
93	ULCP	Cypress Proprietary Binary	ULCP binary message for panicreport (CTM-200 only)
97	ULCP	Cypress Proprietary Binary	ULCP binary format digital I/O with GPS (no events)
98	ULCP	Cypress Proprietary Binary	ULCP binary format digital input event data with GPS
99	ULCP	Cypress Proprietary Binary	ULCP binary format MIL status with number of DTC
111	ULCP	Cypress Proprietary Binary	ULCP binary format with msg 112, CID, RPM, fuel level, seatbelt, speed, rssi, sqi, accel, pdop
112	ULCP	Cypress Proprietary Binary	ULCP binary format modem ID with GPS
113	ULCP	Cypress Proprietary Binary	ULCP binary format digital input/output (IO), modem ID, with minimal GPS (time,lat/lon,validity) (CTM-200 only)
255	ULCP	Cypress Proprietary Binary	ULCP Custom Message- Flexible Format
255	ULCP	Cypress Proprietary Binary	ULCP Custom Message for spreader controllers (CTM-200 only)

Other Message Types

Decimal ID	Message Name	Message Type	Message description
100	TAIP PV	Standard TAIP	GPS TAIP PV message
101	TAIP LN	Standard TAIP	GPS TAIP LN message

11.7 Report Triggered Scripts

The CTM-200 can be configured to execute a script or list of actions when a report is triggered. With report-triggered scripts enabled a series of commands can be executed by the CTM-200 that can perform a series of simple or complex tasks involving logic. The script is a linux shell script file (.sh) file that resides in the CTM-200 non-volatile memory. The name of the script correlates to a specific report so whenever the report is triggered, the script will execute if script execution is enabled.

Reports need to be located in the **/var/data/reports/scripts** directory on the CTM-200. The file naming convention is reportN.sh where N is the report number, for example report9.sh would be a script that would execute based on general report 9 being triggered.

Note: For standard GPS and Input/Output reports the corresponding file based report number for GPS report 1 is report1020 and for IO report 1 is report1040.

The format for the script file

```
#!/bin/sh
```

```
.....
```

```
.....
```

```
.....
```

```
.....
```

Shell scripts must also respect Unix line endings. If written using a windows editor CR/LF must be stripped from the file, this can be performed after the file is copied across to the CTM-200 using the “dos2unix” utility.

Shell scripts must have their mode changed to executable, this is accomplished by using the chmod command, ie chmod +x “filename.sh”

11.8 File Based Reporting

In addition to providing real time reporting, reports can be stored in files. One advantage to file based reporting is that the trigger mechanism or reporting interval can be set to a high frequency above practical means for real time reporting. The reports can be compressed into a “zip” format for easy archival and delivery.

11.9 Store and Forward

All reports can be enabled to utilize the “store and forward” feature of the CTM-200. Store and forward allows the CTM-200 to store reports in non-volatile system memory when the device is out of Wireless coverage (Cellular or Wi-Fi). The CTM-200 uses internal logic that determines when the wireless signal is at a level where the real time delivery of data would be compromised. When it detects this condition, the

reports are stored in memory. When the logic detects that the wireless signal is once again acceptable the stored reports are forwarded.

12. System and Event logs

The CTM-200 logs operating system events as they happen. The most verbose log is the system log or syslog. The syslog captures all device events as they occur. The system log is volatile; the contents of the system log are lost on a power reset. Syslog can be captured to a file or connected computer for persistent logging

The Event log is a non-volatile log that logs and optionally reports all important firmware events such as cellular/wifi network connectivity, firmware generated power cycle, firmware updates, etc.

The event log will grow until cleared or it will roll over when its memory capacity is reached (> 1 year of logging). Event logs can be automatically delivered via the CTM-200 reporting system.

An example of a partial event log:

```
Mon Jan 13 08:47:22 PST 2014 [36]:POWER_UP:00000001
Mon Jan 13 08:47:22 PST 2014 [36]:IGN_ON
Mon Jan 13 08:47:22 PST 2014 [36]:WIFI_AP_UP
Mon Jan 13 08:47:22 PST 2014 [36]:CELL_ONLINE 0 mins 36 secs after POWER_UP, RF Quality: 17%
Mon Jan 13 12:46:46 PST 2014 [14400]:HEALTH
Mon Jan 13 16:37:28 PST 2014 [28241]:CMD_DATA_RESET:OK
Mon Jan 13 16:46:46 PST 2014 [28800]:HEALTH
Mon Jan 13 20:46:46 PST 2014 [43200]:HEALTH
Mon Jan 13 20:47:08 PST 2014 [43222]:CELL_OFFLINE after 719 mins 46 secs online, RF Quality: 32%
Mon Jan 13 20:47:26 PST 2014 [43240]:CELL_ONLINE after 0 mins 18 secs offline, RF Quality: 31%
Tue Jan 14 00:46:45 PST 2014 [57600]:HEALTH
Tue Jan 14 04:46:46 PST 2014 [72000]:HEALTH
Tue Jan 14 08:46:45 PST 2014 [86400]:HEALTH
Tue Jan 14 08:47:19 PST 2014 [86433]:CELL_OFFLINE after 719 mins 53 secs online,
Tue Jan 14 08:47:32 PST 2014 [86446]:CELL_ONLINE after 0 mins 13 secs offline, RF Quality: 30%
```

The event log can be configured for different levels of verbosity, an example of a partial event log is shown above. POWER_UP:00000001 indicates a power on condition and the nature of the power, ignition, reset,

etc. CELL_ONLINE events record when cellular connections are established and CELL_OFFLINE record when offline conditions occur. HEALTH events are messages that indicate the CTM-200 operating system is operating normally. The default configuration for a HEALTH message is once every 4 hours.

13. Connection monitoring tools

Watch dog timers are used to monitor network connectivity and reset the network connection or CTM-200 if a timer expires indicating a network connectivity issue.

- Setup a ping target to generate network traffic
- Configure the network watchdog for cellular traffic
- Configure a watchdog timer for the Wi-Fi network.

14. Security

14.1 Remote Access Control

Remote access control can limit remote access to the CTM-200 embedded Web pages or command line consoles (Telnet/SSH). Telnet and SSH connections are password protected with a configurable password.

14.2 Friends list

Block incoming packets from an IP address that is not defined as a “friend”. Eight Friends list IP addresses can be defined.

14.3 LAN Friends

LAN Friends is used to control access to PC devices connected via the CTM-200 Ethernet ports. Up to 8 MAC addresses can be allowed Ethernet access, all other devices will be denied packet forwarding and routing.

14.4 Radius

The CTM-200 LAN ports and Wi-Fi interface supports 802.1x Radius authentication servers.

15. Networking

15.1 VPN

15.1.1 IPSec

The CTM-200 supports IPSec VPN communications.

The CTM-200 uses the KAME IPSec-tools: setkey tool to manipulate the Security Policy Database (SPD) and Security Association Database (SAD), and the racoon Internet Key Exchange (IKE) daemon within the OpenCTM Linux 3.2 environment.

To successfully setup an IPSec communication tunnel between a CTM-200 and other VPN hardware a variety of settings must be configured. A partial list required to begin to create a test environment is below:

- server public IP
- server LAN IP subnet / netmask
- a pre-shared key for IPSec
- transport type : ESP / AH
- IKE Encryption and Diffie-Hellman Group eg. 3DES with Group 2 (1024-bit prime)
- encryption algorithm eg AES256, DES, 3DES
- hash algorithm eg. MD5, SHA1

15.1.2 VPNC

VPNC is a simplified IPSec/VPN client application that was developed as a Linux alternative to the Cisco Easy VPN Client software for PCs. VPNC was initially developed to interoperate with Cisco VPN Concentrators and PIX/IOS routers, but may work with other similar equipment.

- Authentication method using Pre-Shared-Key + XAUTH is known to be insecure. For more details see the Cisco Security Notice at www.cisco.com/warp/public/707/cisco-sn-20040415-grppass.shtml
- Limited configuration options, may not work with all equipment
- Limited routing capabilities: VPNC is used to create a tunnel between the client (CTM-200) and the server; it is not a site-to-site solution such as Racoon/IPsec which can be used to connect remote subnets.

16. Engine Diagnostics Support

As part of the general reporting system, the CTM-200 is capable of monitoring a variety of Engine Diagnostic parameters. These parameters can be used as events or triggers to generate reports. In addition to the reporting of real time Engine parameters the CTM-200 processes key parameters to deliver accumulated values for fuel consumption, fuel rate, Idle time and engine hours. Engine Diagnostic support is available via the CTM-200 on board CAN interface. The CAN interface supports vehicles using the ISO-15765-4 (2008 and newer small and light duty vehicles) protocol and the J1939 protocol (heavy duty vehicles). Vehicles that do not support the CAN interface can be supported using the Cypress Solutions E-VDT (Engine vehicle diagnostics transmitter).

When CAN support has been enabled on the CTM-200 and the cables connected. Engine/vehicle parameters will be available to the CTM-200. The CTM-200 can use the available Engine/Vehicle parameters for accurate real time calculation of:

- Total Fuel¹
- Fuel Rate¹
- Total Engine Hours
- Total Idle Time
- Odometer²

¹Fuel calculation is dependent on the vehicle ECU providing a parameter that can be used to determine fuel consumption such as MAF (mass air flow) sensor or fuel tank level values.

²In some cases Vehicle odometer is available from the vehicle ECU, in cases where this is not available the on board odometer on the CTM-200 can be set to match the vehicle odometer

The above values are stored in non-volatile internal memory on the CTM-200 are available to AVL tracking applications.

In addition many other Engine/vehicle parameters are available. Engine/vehicle parameters vary based on vehicle make, model, and year of manufacture. Contact Cypress Solutions for a complete list of supported vehicles.

For vehicles where the connection to the vehicle ECU is not possible or not available the CTM-200 can take advantage of GPS sensor information and calculate an accurate GPS based **odometer** value.

17. Geo-Routing

The CTM200 has the ability to generate reports based on a mobile asset or vehicle location with respect to a list of pre-defined routes stored locally on the CTM-200. Up to 32 routes can be defined; each route can be either series of points defining a route, a series of points defining an area, or a single point. The trigger event is when the vehicle enters or leaves the route or area. When a geo route trigger occurs a report is generated that is appended to an existing general report.

18. Accessory or 3rd party product support

18.1 PAD Mode

PAD Mode or Packet Assembly or Disassembly is used to allow the CTM-200 to act as a “virtual serial port” and route data from devices such as PLC (programmable logic controllers), etc. to server applications where the data can be viewed as native serial data for analysis. Serial data can be bi-directional from the remote side to the server or vice versa.

18.2 MODBUS

For devices that support MODBUS communications the CTM-200 supports MODBUS Slave, MODBUS Slave Gateway and MODBUS Master Gateway, MODBUS Master

18.3 Man Down Pendant

The CTM-200 has integrated support for the Cypress Solutions Man Down Pendant. The Man Down system uses a 2.4 Ghz 802.15.4 wireless personal area network (WPAN) to communicate with the CTM-200. With the optional 802.15.4 2.4 Ghz radio installed the CTM-200 can act as a cellular gateway for the Man Down Pendant. Messages received from the pendant can be relayed to remote servers; in addition remote servers can “page” the Man Down Pendant from the remote server. Each Man Down pendant has a unique 16 digit hexadecimal ID that identifies the Man Down Pendant. Acknowledgements to Man Down alerts can be gateway acknowledged for server acknowledged for true closed loop operation. Up to 16 Man Down pendants can be supported by one CTM-200



Note: The CTM-200 requires an optional WPAN radio module to be installed to communicate with the Man-Down Accessory.

18.4 Garmin® Personal Navigation Devices

The CTM-200 supports Garmin® products that support the Fleet Management Interface (FMI). When connected to the CTM-200 via serial link the CTM-200 manages the local connection between the Garmin® and the CTM-200 and the wireless link between the CTM-200 and the remote server. The CTM-200 notifies the remote server when the Garmin is connected or disconnected.

The CTM-200 support for the Garmin® product uses a modification of the standard PAD (Packet Assembly Disassembly) feature of the CTM-200. Default configuration set by the selecting the Garmin® mode on the CTM-200 can be over ridden by individual configuration of the CTM-200 PAD settings.

Remote Server < ---> Internet <--WAN--> CTM-200 <--Serial-->Garmin

Note: The CTM-200 communicates with Garmin® (NUVI) products which support the Garmin FMI interface and the associated Garmin USB to serial cable.

18.5 Miscellaneous external devices, salt spreader controllers, etc.

In some cases, specialized auxiliary equipment are connected to the serial port(s)/CANBus on the CTM-200. Output from this equipment can be added as a "message payload" and delivered to the monitoring server. This allows applications to receive data from the connected devices. The data payload is appended to the \$PGPS report message (114) or as binary payloads. The \$PGPS message or binary messages are generated when the data is received on the CTM-200 serial port either via polling or when data is received by the CTM-200.

Auxiliary device support is a highly configurable feature of the CTM-200. Parameters such as device name, leading characters, terminating characters, number of bytes to read, polling or non-polling or whether any processing of the incoming data is required can be configured.

Example 1:

A Salt spreader controller is connected to the CTM-200, The output from the spreader controller is:

131213141516171819202122232425262728293031

The Corresponding report message:

```
$PGPS,000000.00,V,0000.0000,N,00000.0000,E,000.0,000.0,000000,+00000,0,1312131415161718192021
222324252627228293031*7E
```

Example 2:

A weight sensing interface is connected to the CTM-200, The output from the weight sensor is:

```
LBFF55;iiii;cccc;aaaaaa;u;rrrrrrrrrrrrrr;SGGG.GGGGGG;STTT.TTTTTT;xx<CR><LF>
```

The corresponding report message:

```
$PGPS,002349.00,V,0000.0000,N,00000.0000,E,000.0,000.0,060180,+00000,0,1234567890,LBFF55;iiii;c
ccc;aaaaaa;u;rrrrrrrrrrrrrr;SGGG.GGGGGG;STTT.TTTTTT;xx*53
```

18.6 Access Control

The CTM-200 supports the I-Button® and HID® proximity card systems for access control. The access control devices can be connected via serial or GPIO connector on the CTM-200. The CTM-200 supports both wiegand and serial protocols. The CTM-200 can be configured to execute “scripts” on lock and unlock. For example, an unlock script may trigger an output to control a relay that enables vehicle ignition. The CTM-200 can also store an “Access control list” which is a list of ID’s that are “valid” . When an access control request is made, the ID from the button or card is compared against a stored list on the CTM-200. If the ID is valid an unlock script would execute, unlocking a door, or enabling ignition. When an attempt is made at access control the CTM-200 generates a report message containing the ID of the button or card and whether the card is a valid or invalid card based on the stored list on the CTM-200. The ID payload is appended to the end of the \$PGPS message, message 114. The message is automatically generated when an access control attempt is performed.



Example:

An access control attempt is made using a button or card. The ID of the button/card is:

039-30391


The corresponding message is:

```
$PGPS,171134.00,A,4915.3868,N,12259.8049,W,000.0,000.0,170609,+00004,5,09604890958,039-30391,V*33
```

where “V” indicates the ID is a valid ID as compared against an internal list stored on the CTM-200. “F” would indicate an invalid ID.

18.7 RF Switch

The CTM-200 supports an accessory RF switch/speed buzzer that is used to disable radio communications in areas where radio emissions are prohibited (blasting areas). The accessory has a super bright LED indicating when the CTM-200 radio(s) are off and a buzzer that can be triggered when a speed threshold has been exceeded.

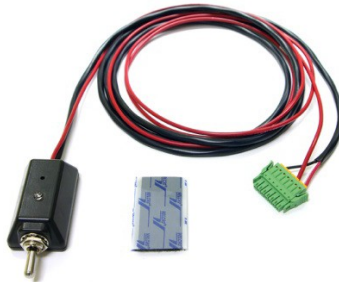

18.8 CTM-200 with integrated Iridium™ ISU module

The CTM-200 supports an integrated Iridium Satellite module for communications when cellular coverage is not available. The CTM-200 has internal logic that manages the transition from Cellular to Satellite and back to Cellular. Standard CTM-200 reports, Packet Assembly/Disassembly (PAD) data and console commands and Man Down alerts can be transmitted via Satellite.

18.9 CTM-200 with integrated battery backup

An optional internal battery is available for the CTM-200 that allows it to operate for 2-3 hours if the main power supply has been disconnected from the CTM-200. This is useful for applications where the main power is not reliable.



Technical Support

**Cypress Solutions Service
Support Group**

1.844.462.9773 or 778.372.4603

5.00am to 5.00pm PST

support@cypress.bc.ca

www.cypress.bc.ca